



HYPER CHARGE U9

Wireless Tattoo Machine

USER MANUAL

12 39 3.6 3.3 2.7 2.4



THUNDERLORD POWER

INDEX

Safety Notice	3
Machine Overview	4
The Grip	5
The Body	6
Detaching Battery Pack	7
Control Menus	8
TYPE-C Connection	9
Connecting your Machine	10
Adjusting Needle Depth	11
Adjusting Stroke	12
Additional Information	13
Troubleshooting	14

SAFETY NOTICE

**CLASS III SYMBOL**

A Class III appliance is designed to be supplied from a separated/safety extra-low voltage (SELV) power source. The voltage from a SELV supply is low enough that under normal conditions a person can safely come into contact with it, without risk of electrical shock. The extra safety features built into Class I and Class II appliances are therefore not required. For medical devices, compliance with Class III is not considered sufficient protection, and further more-stringent regulations apply to such equipment.

TECHNICAL DATA

Operating Voltage:	4 - 12V DC
Current:	2A
Stitch Frequency:	50 - 200Hz
Stroke:	2.4-4.2 mm
Connection:	TYPE-C port with 5V charger
Motor:	Coreless motor (Ø: 17 x 28 mm)
Operating Mode:	Cutting lines, shading, and dotting
Ambient Temperature:	0 to 40 °C
Relative Humidity:	30 to 75%
Dimensions (Ø X L):	38.5 x 138.6 mm
Pen Weight:	Approx. 276 g
Battery:	1750 mAh
Charging Time:	0.5 hours
Working Time:	5-6 hours

**BARRIER PROTECTING YOUR MACHINE**

Although the grip is autoclavable, we strongly suggest the use of barrier products to protect your machine. For a visual demonstration of many barrier protection methods, please visit our YouTube channel [@thunderlordpowertattoo](#).

This machine is not to be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Keep machine out of reach of children without parental supervision.

MACHINE OVERVIEW

Hyper Charge
U9Unleash your
Power

Wireless pen-style machine featuring a detachable battery,
and a whole new level of freedom.

THE GRIP



Hyper Charge U9 Grip



 
Autoclavable Ergonomic Grip Design

Compatible with most tattoo cartridges
on the market

THE GRIP

The Hyper Charge grip allows artists ratcheting control over needle depth. The standard Grip has a diameter of 38.5mm. The Grip is crafted from a solid rod of 6061 T6 aircraft-grade aluminum. This polished and anodized grip is safe to be sterilized under steam, in an autoclave or sprayed with cold sanitation solutions.

THE BODY



Hyper Charge U9 Body



THE BODY

The body is the core of the machine. Constructed from a solid rod of aircraft- grade aluminum, Tattoo master structure, extreme stability, powerful output. Ratcheted, adjustable stroke. this module should be sanitized by wiping it with cold sterilization solutions only.

Caution: Avoid getting fluids into the housing

DETACHING THE BATTERY



Hyper Charge U9 Battery



DETACHING THE BATTERY

 
To remove the battery, make sure to hold the body and handle firmly. Insert the battery and push inward to install the battery. Make sure the locking mechanism moves freely. The battery must be properly positioned to ensure the power leads are aligned. Avoid contact with the battery leads when charging or servicing.

Changeable Wired power supply mode RCA Connector.

CONTROL MENUS



On Animation



Mode Interface



Charging Display



4 grids of power, 25%/grid.

When the battery power is **less than 5%**, the last grid flashes.

Charging: When the device is turned off, connect the Type-C port to charge, the lightning icon flashes, and the outer ring of power rotates.

When the device is turned on, connect the Type-C port to charge, the lightning icon flashes, and the outer ring of power is updated in real time.

Note:

- ① For best results, please use the provided charging cable.
- ② It is recommended to fully charge the battery before use.
- ③ If the device cannot be turned on for the first time, please charge it for 4 hours before turning it on.
- ④ If it is not used for a long time, please charge it once a month to avoid battery damage.

ON&OFF: Press the power button for 2s

The device will automatically shut down after 10 minutes of inactivity in the power-on pause mode.

STOP&START: Short press the power button to stop/start (press the power button 2 times for switch mode)

MODE ADJUSTMENT: Press the power button twice in the pause state to switch modes (**M1**, **M2**, **M3**, **P**).

M1-Regular Mode: the needle will keep moving. **M2**: Intermittent Mode - the needle will go and stop regularly, which allows starters to clearly know the effect and adjust in time. **M3**: Gradual Mode - the line color will gradually change from dark to light, which helps starters finish the gradual color of pattern better. **P**-Hitting Mode: the needle swiftly prick, whose speed and force are adjustable, which make it easy for starters to do hair stroke and misty eyebrow.

AT P-HITTING MODE: When output is paused, Press "+" and "-" to switch between intensity,  strong mode,  stable mode, and  soft mode.

TIMING FUNCTION: Start timing when working, reset when shutting down

The time is in minutes, and the maximum display time is 99:59. When it is paused, the time stops, and the time continues when the output is restarted.

TYPE-C CONNECTION



Hyper Charge U9 Battery



TYPE-C Connector



With RCA Connector


TYPE-C CONNECTION

This connecting terminal is compatible with most TYPE-C cables on the market. We recommend you use the included cable for recharging the battery.



TYPE-C cord

CHARGING YOUR MACHINE

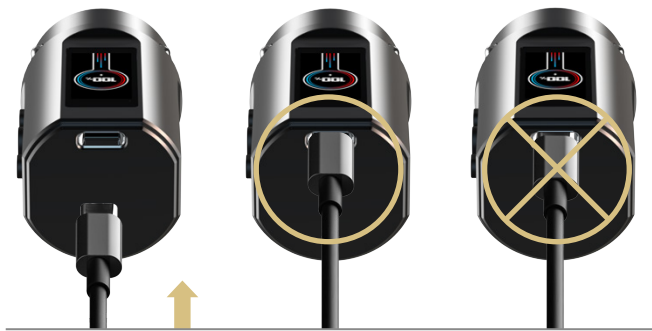

1

Plug the TYPE-C cord into the battery connector.



Best connection



Improper connection
(not plugged in tightly)

HOW TO CHARGE YOUR MACHINE

Plug the provided TYPE-C cable into the connector on the back of the battery. Make sure the cable is properly seated and fully inserted into the battery. The battery will not operate while charging. The TYPE-C connection is only for charging the battery.

The intelligent chip prevents overcharging and ensures battery safety.

To achieve the fast charging effect, the output power of the charging head needs to be higher than 5 volts and 2 amperes.

ADJUSTING NEEDLE DEPTH

Increases needle depth

Decreases needle depth

ADJUSTING
NEEDLE
DEPTH

To adjust needle depth, hold the machine body and battery while turning the Grip. A counter clockwise turn decreases depth, while a clockwise turn increases depth (also known as needle hang). Each time you turn the grip you can feel the feedback of the ratcheting mechanism. Each "click" displaces your needle $\approx 0.2\text{mm}$ and allows you to set your needle precisely without involuntarily turning.



Turning the grip as shown increases needle depth.



Turning the grip as shown decreases needle depth.

ADJUSTING STROKE

ADJUSTABLE
STROKE

7 strokes to choose. In order to adjust the stroke, we divided the central ring district into two parts: the upper ring and the lower ring. When we increase the stroke, the upper ring twists to the right and the lowering twists to the left. On the contrary, the stroke decreases. It is easy to find and choose the stroke you prefer.

2.4mm|2.7mm|3.0mm

Suitable for gentle shading, careful tattoo working on sensitive body parts.

3.3mm|3.6mm

Provide the perfect balance between lining and shading and is the all-rounder.

3.9mm|4.2mm

Great balance between lining and color packing.



ADDITIONAL INFORMATION

VOLTAGE PARAMETERS

While voltage is a parameter that will vary from artist to artist, this machine has been tested to operate at a minimum voltage of 4 Volts and a maximum voltage of 12 Volts. Depending on the type of needle configuration or brand you use, feel free to adjust the voltage to obtain the desired performance.

ACCEPTED NEEDLES

Use only cartridge needles with an internal membrane. This will avoid accidental contamination inside your machine. Fluids such as ink, water or oil will void warranty of the device and may require replacement of internal parts.

MAINTENANCE

- Hyper Charge U9 is sold pre-lubricated from the factory and does not need internal lubrication.
- Prevent any type of external elements from entering inside the machine as they will disrupt the motion of the component and contaminate lubrication.
- The grip of the machine is autoclavable. Use only steam autoclaves at temperatures no higher than 270° Fahrenheit or 132.222° Celsius. Add a hint of ointment or PTFE grease around internal opening of grip or on stabilizing friction O-rings for optimal functionality after autoclaving. Refer to page 5 for additional information.
- Machine Body and Battery can be sanitized from the outside with cold sterilization products.
- Never spray the surface directly to prevent fluids from entering the machine. Always use pads or disposable paper towels to apply sterilization products.
- DO NOT DISASSEMBLE MACHINE.

WARRANTY

- One year warranty from the date of purchase.
- Motor warranty is void if motor shows signs of being dropped, of internal fluids entering the motor, and/or IF motor shows signs of being tampered in any way.

ADDITIONAL INFORMATION

HANDY TIPS

The following tips will help you get the most out of your Hyper Charge U9 and avoid potential issues:

- Always secure your machine. Dropping the machine can cause damage to the magnets, bearings and brushes of the motor.
- Use only cartridges with membranes to avoid contamination.
- Rinse your needle frequently to avoid pigment drying up and slowing down your cartridges. When rinsing your needle, ensure to dip only the tip of the cartridge to avoid back flow of fluids.
- Inspect your needles prior to use.
- Avoid scratching the surface of the embodiments.
- Use only FDA-approved cold sterilization solutions for disinfection.
- Do not lubricate machine unless instructed otherwise.
- Store your machine in a secure place.

TROUBLESHOOTING

1.- Machine manufacturer

Hunan Biomaser Technology Co.,LTD
Room101,Qingshan Village, Qingshanpu Town, Changsha, Hunan, China

2.- Servicing your machine

Problem as follows are not covered in warranty:

- Damages due to wrong installation or operation.
- Incorrect personal maintenance, change or modification of the machine.
- Damages due to water, accident or natural disaster.
- Superficial damages which do not interfere with the normal operation of the machine.

3.- Warning

Disconnect machine from any power before making any adjustments.

If you have any questions about the machine please contact the dealer in time.

For additional tips and tutorials, please visit Thunderlord Power's  @thunderlordpowertattoo.